


REMOTE CONTROL

WHEN TAKEN IN USE:

1. PRESS LEARN BUTTON **A** ON THE ELECTRONICS UNIT UNTIL YOU HEAR **ONE** BEEP
2. "VALIDATE REMOTE. PRESS ANY KEY" IS DISPLAYED
3. POINT THE REMOTE TOWARDS DISPLAY **B** AND PRESS ANY KEY



- OK** ACCEPT / NAVIGATE
- 0** NAVIGATE / CHANGE
- 1** NAVIGATE / CHANGE
- 2** NAVIGATE / CHANGE
- 3** NAVIGATE / CHANGE
- C** CANCEL / UP IN MENU
- 4** VOLUME
- 5** INSTRUCTIONS
- F1** PROGRAMMABLE KEY
- 123** ENTER NUMBERS

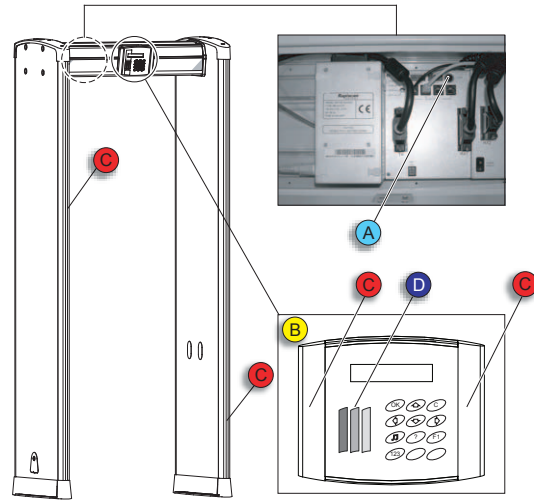

MENU NAVIGATION EXAMPLE - CHANGING SENSITIVITY

1. Press **123**. Program asks "ENTER: 0= SUPER USER 1= USER". Enter "0"
2. Enter the SuperUser level access code (the factory default is 1, 2, 3). Press **OK**.
3. "Metal detection parameters" is displayed on the screen. Press **1** twice to display "Sensitivity".
4. Press **OK**. Set the desired value by using the arrow keys. (Alternatively, press **123** and use the number keys.) Accept the value by pressing **OK**.
5. Hold **C** down for a moment to return to normal mode.



ZONE DISPLAY


Red lights indicate the approximate height of the detected item(s).



STATUS LIGHTS

- ALARM! / ERROR!
- NOT READY TO OPERATE / USER IS BROWSING MENUS
- UNIT IS READY / OPERATING

SUPER USER MENU

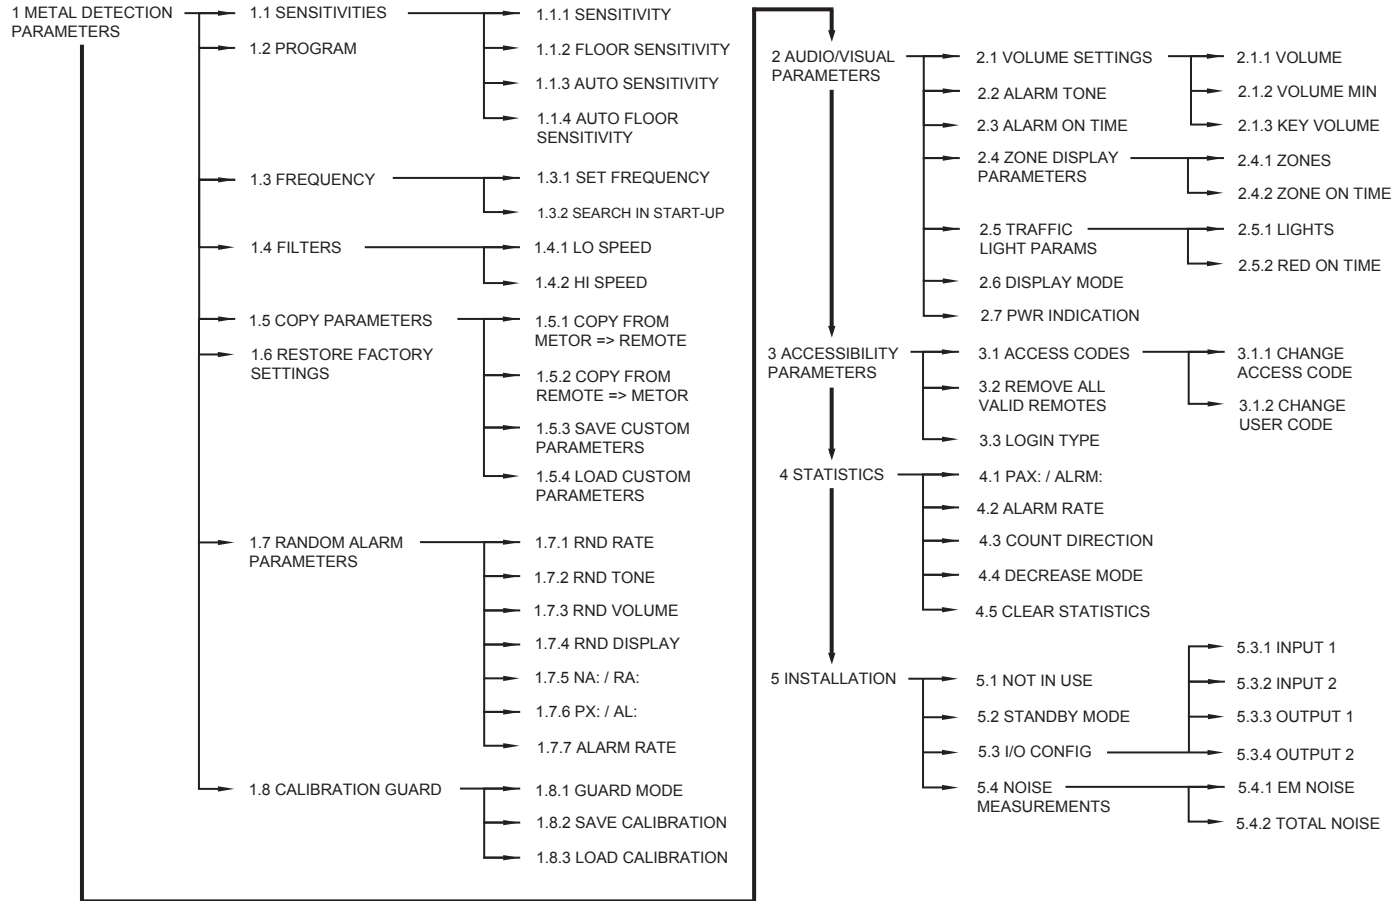

VERSIONHALLINTA / REVISION HISTORY

Product Metor 300 EMD	Date 24.4.2008	Rev. 1.10	Code 8101 021-2PE
Title QUICK INSTRUCTION LABEL M300 EMD 350X140 PIKAOHJETARRA M300 EMD 350X140			

Rev. 1.10, 24.4.2008

Lisätty teksti Metor 300 EMD / Added text Metor 300 EMD

Rev. 1.00, 28.6.2006

- Hyväksytty tuotantoon 11.5.2007 ORA

* Accepted in production 11.5.2007 ORA